

Item 146-801 Contour Plotter Replacement Instructions for Counterweight Cable

Enclosed is the string for the contour plotter counterweight.

- 1. Remove six screws holding front cover plate.
- 2. Remove six screws holding white acrylic back.
- 3. Remove screw on pen holder assembly that secures counterweight string.
- 4. Press 1/8" pin out of counterweight, remove thimble.
- 5. Put loop inside counterweight. Press pin back in.
- 6. Reconnect new string to pen holder and feed through top pulley, then down to counterweight.
- 7. Lift pen holder all the way up and pull string tight down past counterweight. Put an black mark 1/8" above counterweight.
- 8. Make loop in counterweight cable and crimp lug.
- 9. Check that stylus goes up and down freely.
- 10. Install front cover plate and white acrylic back.

5218 Barthel Industrial Drive NE – Albertville, MN 55301 Phone: 763-497-2071 or 800-497-2071 Fax: 763-497-2295