

Instructions for Digital Caliper - Items 705-555, 705-556 and 705-557



Operating Condition: Temperature: 5-40°C Relative Humidity: ≤80% Prevent any liquid from contacting the protective sticker

Never apply voltage (e.g. engraving with an electrograph) on any part of the caliper for fear of damaging the circuit.

FUNCTIONS:

- 1. ON/OFF: Power on/off switch
- 2. ABS/ZERO: zero setting button
- 3. mm/in: metric/inch conversion
- 4. SET: presetting button not used

OPERATION:

- 1. ON/OFF button
 - 1) Press ON/OFF button at any position when the power is off, the caliper will be ready to work and display the measuring value.
 - 2) Press ON/OFF at any position when the power is on, the caliper will stop working.
 - 3) In state of hold, the caliper cannot be shut down by pressing ON/OFF
- 2. ZERO button
 - Press "ZERO" button to set the current point to zero and the caliper will display zero.
- 3. mm/in button
 - Press "mm/in" button at any position for metric/inch conversion.
- 4. SET button
 - (Not Used)
- 5. Restart the caliper after powering off by pressing ON/OFF button. Close caliper and press Zero button.

TECHNICAL SPECIFICATIONS:

- 1. Resolution: 0.0005"
- 2. Repeatability: 0.0005"
- 2. Accuracy: +/- 10.00008+0.000002 x Length (inch)
- 3. Maximum measuring speed: 40" per second
- 4. Power: button battery SR44, 1.55V

BATTERY REPLACEMENT:

Once display begins flashing or even no display, slide the cover open as the arrow shows and replace with a new battery (SR44, 1.55V).

- NOTE: 1) The positive pole of the battery must face out
 - 2) Please preset the starting point over again after battery replacement.

5218 Barthel Industrial Drive NE – Albertville, MN 55301 Phone: 763-497-2071 or 800-497-2071 Fax: 763-497-2295 www.rpdinc.com sales@rpdinc.com

G:\WORK\INFO\700\705-555 Digital Caliper.doc