



Expect Service

Radiation Products Design Inc

INSTRUCTIONS

RPD INFORMATION

Address	5218 Barthel Industrial Drive Albertville, MN 55301
Website	www.rpdinc.com
Email	sales@rpddinc.com
Phone	763-497-2071 or 800-497-2071
Fax	763-497-2295

RPD PRODUCT INFORMATION

Item Number	Description
278-520	Klarity Mini Oven, 110V



KCOQ-1750W Instructions

WARNINGS

- Do not touch any hot surfaces
- Plug only into a 3-hole grounded electrical outlet
- Do not immerse unit, cord or plug in liquid at any time
- Unplug cord from outlet when not in use and before cleaning
- Do not operate unattended
- Do not use this unit for anything other than intended use
- Do not use outdoors
- Always use on a firm, dry and level surface at least 12" from walls or any other obstruction (top, rear, left and right)
- Do not use if unit has a damaged cord or plug, in the event the appliance malfunctions, or has been damaged in any manner
- Keep children and animals away from unit
- Any incorrect installation, alterations, adjustments and/or improper maintenance can lead to property loss and injury. All repairs should be done by authorized professionals only
- Ensure that the designated power supply is adequate for continual usage and the voltage is correct.

TO USE

1. Remove all packing and protective plastic coating from the side panels.
2. Insert the plug into the socket.
3. Turn the power switch on.
4. Rotate the knob clockwise to set cooking time (timer indicator fan will turn on).
5. Immediately rotate the knob clockwise to set cooking temperature (heating indicator will turn on and begin to heat).
6. Heating indicator will shut off once the desired temperature is reached. The heating indicator will turn on again to maintain temperature.
7. An alarm bell will ring indicating that the timer has reached zero. The heating element will automatically shut off.

CLEANING – NOTE: To maintain cleanliness and increase service life, the oven should be cleaned daily.

Do not immerse the unit

in water or any other liquid. If liquid enters the electrical compartment it may cause a short circuit or electrical shock

- Disconnect the power cord from the electrical outlet.
- Allow unit to cool down.
- Clean with a good quality stainless steel compound.
- Clean the interior regularly with a good quality oven cleaner.
- Clean the oven door glass with conventional glass cleaner.
- Do not clean with a water jet stream.
- To avoid damage, do not use abrasive cleaners or scouring pads.
- If soap or chemical cleaners are used, be sure they are completely rinsed away with clear water immediately after cleaning. Chemical residue could damage or corrode the surfaces of the unit.