



Radiation Products Design, Inc.

PET Waste Well Installation Instructions Item 994-010




Note: Front



Cover rolled back.

PET Waste Well (Item 994-010) with 2" thick lead walls and 1/2" thick lead floor, unit is shown with optional rolling cover (Item 994-011) with 1/2" thick lead.

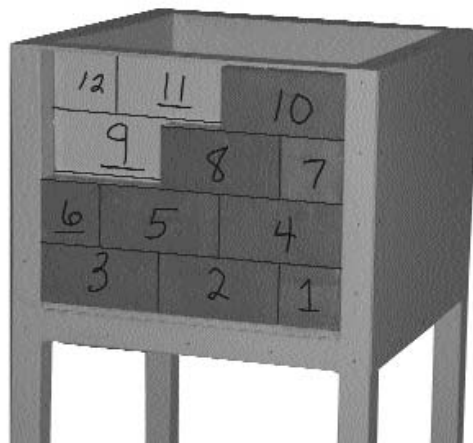

Installing Lead Walls:

1. Remove stainless steel top wall cap.
2. Remove screws securing side covers.
3. Install lead bricks matching numbers to exact position.
Note: Do Not change position of lead blocks.
4. Install covers and stainless steel top wall cap.

INFO.Q. 994-010-A 1-01

5218 Barthel Industrial Drive N.E. Albertville, MN 55301
Phone: 763-497-2071 / 800-497-2071 Fax: 763-497-2295
www.rpdinc.com e-mail: sales@rpdinc.com